


# Orientation of Cantilever Mounts for use with truck caps

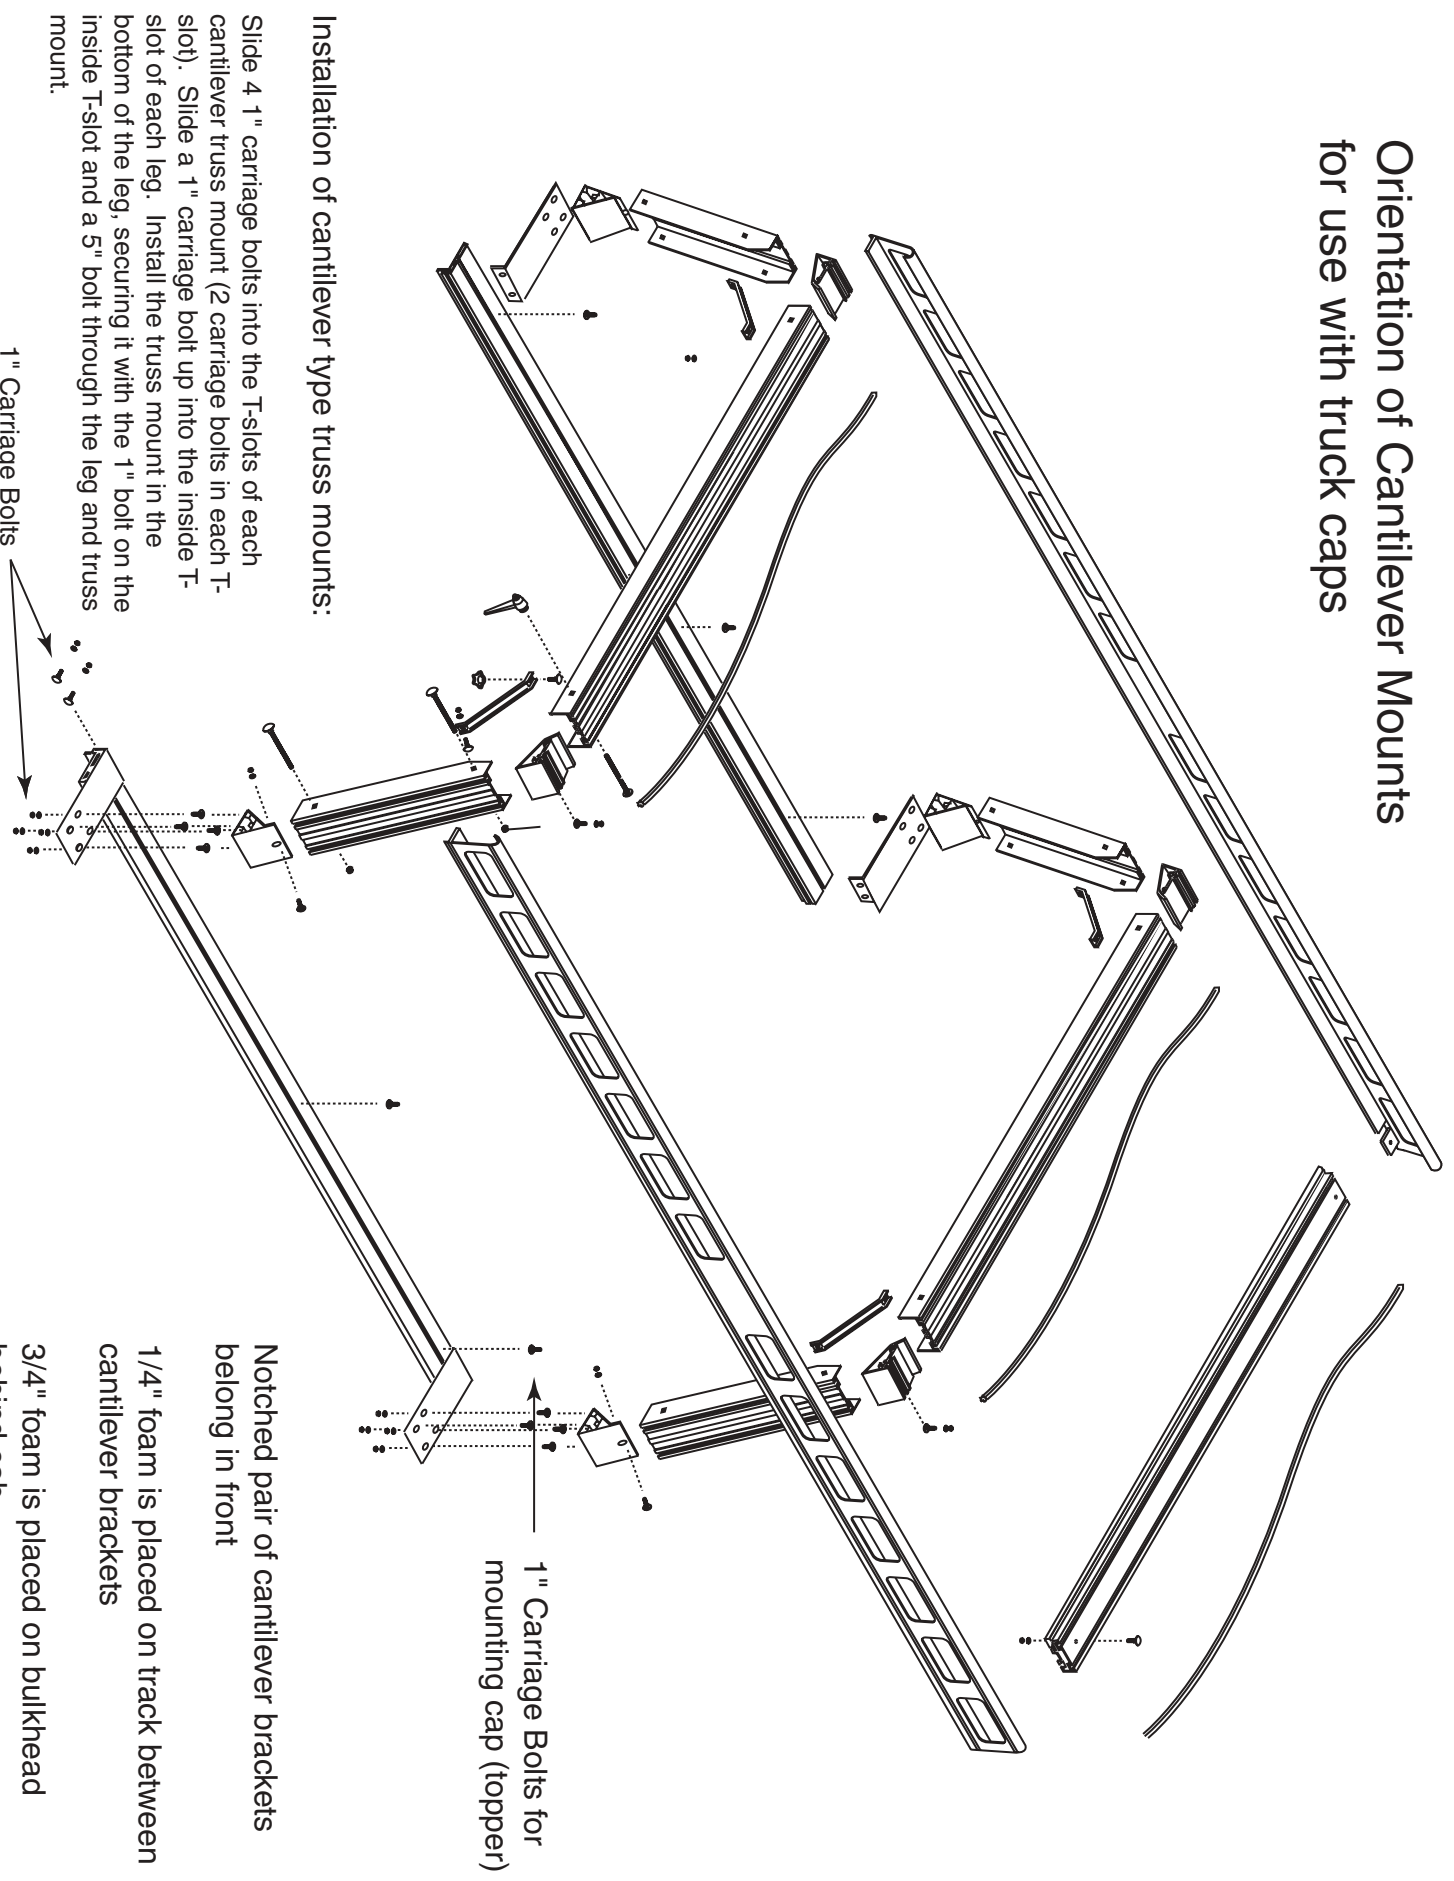

## Installation of cantilever type truss mounts:

Slide 4 1" carriage bolts into the T-slots of each cantilever truss mount (2 carriage bolts in each T-slot). Slide a 1" carriage bolt up into the inside T-slot of each leg. Install the truss mount in the bottom of the leg, securing it with the 1" bolt on the inside T-slot and a 5" bolt through the leg and truss mount.